


Hand Priming Pumps

Read hand Priming Pump
Read hand Priming Pump Spare Parts
Ajax Hand Priming Pump
Ajax Hand Priming Pump Spare Parts
IB Hand Priming Pump
IB Hand Priming Pump

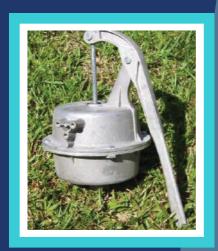

READ HAND PRMING PUMPS & SPARE PARTS


READ HAND PRIMING PUMP

READ HAND PRIMING PUMP (Without Galvanised Bracket)



READ HAND PRIMING PUMP SPARES

Diaphragm	RHPA/3	Α
Galvanised Mounting Bracket	RHPA/4	Α
Fulcrum Collar	RHPA/5	Α
40mm (1½") Back Nut	RHPA/6	Α
Pump Handle	RHPA/7	Α
Stainless Steel Eye Bolt, Nut & Washer	RHPA/8	Α
Valve Cover Plate	RHPA/11	Α
Valve Rubber	RHPA/12	Α

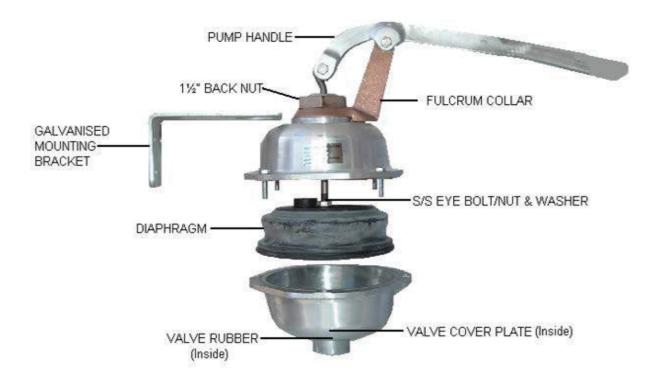

This "Read Hand Priming Pump" has a heavy duty polished Aluminium body with an Aluminium fulcrum collar. The Diaphragm is very solid rubber with a metal plate encompassed in the bottom for extra strength. Each Stroke displaces 1.9 litres of Air.


The inlet is 1" BSP and has been beefed up around this area.

The pump is not supplied with mounting bracket but this is available as a spare part if required.

AJAX/QISJAX HAND PRIMING PUMPS & SPARE PARTS

QISJAX HAND PRIMING PUMP SPARES (Formerly AJAX)

Discharge Casing	DHP2	Α
Inlet Valve (Rubber)	DHP24	Α
Hex Bolt - Casing Assembly	DHP62	Α
Hex Nut - Casing Assembly	DHP65	Α
Diaphragm	DHP67	Α
Handle	DHP72	Α

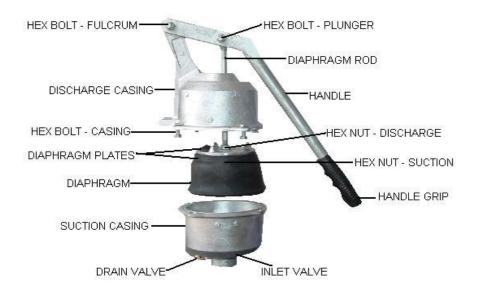

IB HAND PRMING PUMPS

	Code
HAND PRIMING PUMP (20MM F.I. BSP)	350000
SPARE PARTS	
DIAPHRAGM	350005
HANDLE	350010
PUMP TOP HOUSING	350015
PUMP BOTTOM HOUSING	350020
RUBBER EXHAUST VALVE	350025
STEEL SPINDLE	350030
	- -





Hand Priming Pumps

Read hand Priming Pump
Read hand Priming Pump Spare Parts
Ajax Hand Priming Pump
Ajax Hand Priming Pump Spare Parts
IB Hand Priming Pump
IB Hand Priming Pump

